




Ensure washers are assembled in the correct orientation as shown

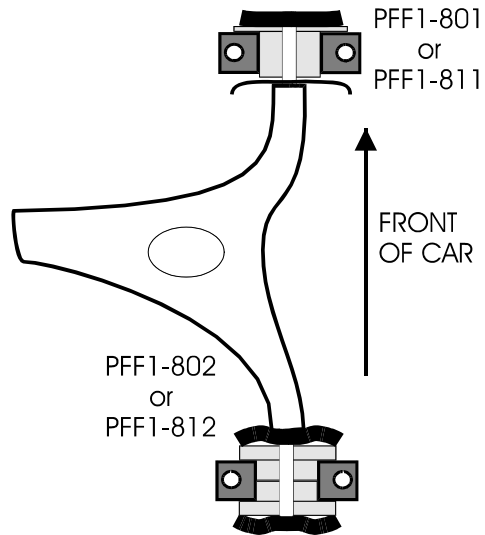

PFF1-802-812 kit comes with different sized rings. Select the correct ring depending on the rear bracket fitted.

Use smaller ring (802b) with the aluminium bracket and 802c with the pressed steel bracket.

It is only possible to fit these bushes after removing the arms from the car.

For arms fitted with the pressed steel rear bracket the rubber bush may need to be burned out using a blowtorch, then the bracket cleaned up to ensure a good surface.

There can be an issue with the PFF1-811 centre sleeve bore size.

We have seen arms with 19 or 20mm centre pins.

Included with the PFF1-811 bushes is the more popular 19mm sleeve

If you find this is incorrect for your car then please telephone and we will send you a 20mm sleeve free of charge.

There can also be an issue with the pin diameter for PFF1-812 sleeves on non-genuine arms.

The genuine arms have a pin diameter of 20mm, the non genuine arms have a pin diameter of 21.3mm.

If you have arms with 21.3mm pin for the 812 bush then telephone and we will send you replacements.

WE RECOMMEND THE USE OF LOCTITE 648 OR 848 TO SECURE CENTRE SLEEVE TO ARM