

POWERFLEX®

PART NUMBER

PFF16-602

DESCRIPTION

FRONT ARM REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x bushes
- 2 x metal sleeves
- 1 x grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual. It is recommended that:

- all work to be carried out by a licensed technician;
 - all safety precautions adhered to;
 - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove the original rubber bush from the arm, clean any dust and corrosion from the bore of the arm. With a file remove any sharp edges from the bore of the arm.
2. Before fitting the new bush align and position the bush slots as seen in Fig A. Fit the new bush using a press/vice. It may be necessary to apply some washing up liquid to the outside of the bush to ease fitting. In some cases it may be easier to insert the bush into the arm at an angle. as seen below in the Fig B.
3. Apply some of the supplied grease to the bore of the bush and insert the sleeve.
4. Re-fit the arm to the car Fig.C and tension all hardware to manufacturers recommended torque settings.



Position
bush slots

Fig. A



Place the bush on an angle

Fig. B

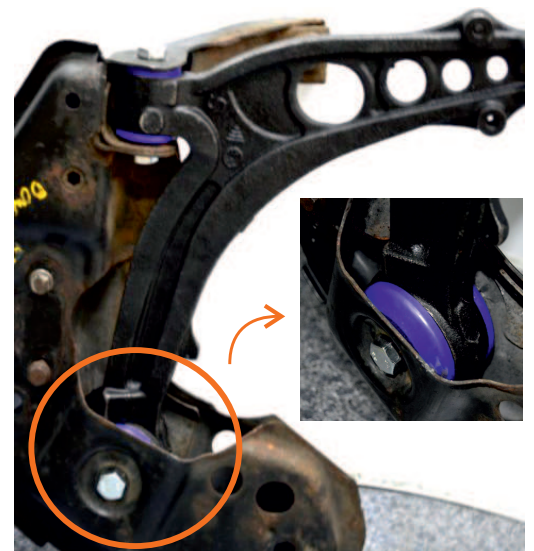


Fig. C