




INSTALLATION INSTRUCTIONS

Part Number 85-1061

On models with reverse choke housing, it will be necessary to trim the adapter using a file or die grinder to clear the housing. The gasket may be used as a template to mark where the adapter needs to be trimmed.

When installing the sliding clip, make sure that the nut is under the bracket as shown. **NOTE:** It is very important that the flat side of the clip is face up.

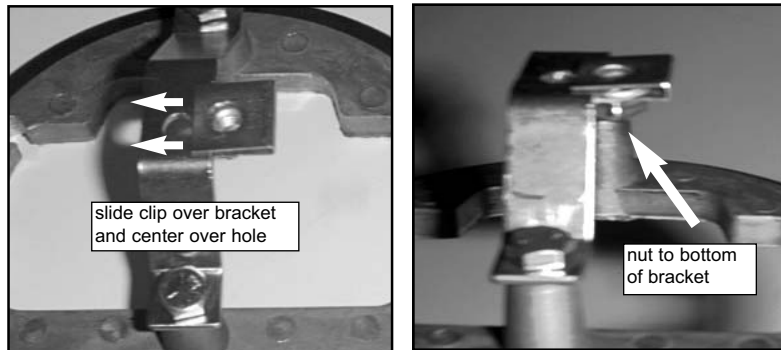

• 1455 CITRUS AVE., P.O. BOX 1329, RIVERSIDE, CA., U.S.A. 92502 • TECH SERVICE 800-858-3333 • FAX 909-684-9060
• e-mail: tech@knfilters.com • WWW: <http://www.knfilters.com>

17269a
4/24/01




INSTALLATION INSTRUCTIONS

Part Number 85-1061

On models with reverse choke housing, it will be necessary to trim the adapter using a file or die grinder to clear the housing. The gasket may be used as a template to mark where the adapter needs to be trimmed.

When installing the sliding tab, make sure that the nut is under the bracket as shown. **NOTE:** It is very important that the flat side of the slide is face up.

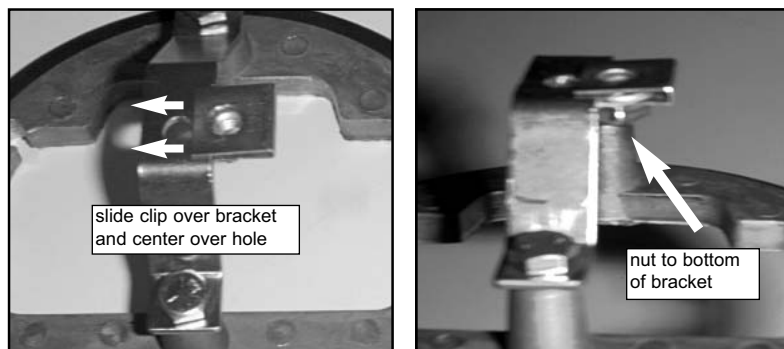

• 1455 CITRUS AVE., P.O. BOX 1329, RIVERSIDE, CA., U.S.A. 92502 • TECH SERVICE 800-858-3333 • FAX 909-684-9060
• e-mail: tech@knfilters.com • WWW: <http://www.knfilters.com>

17269a
4/24/01