


**PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE FITTING THIS KIT.**

**If you have a problem, however small, call our Technical Department.**

Tel:- 01925 629609. Fax:- 01925 629610. Monday to Friday 9am - 5pm.

- 1 Remove the air filter box from the mounting bracket.
- 2 Remove the small bore hose that runs from the air filter lid, to the pipe on the inlet manifold. Push the rubber adaptor into the neck of the small filter. Fit the small filter to the pipe.
- 3 Position the small breather hose, (attached to the oil filter tube) downwards.
- 4 Fit the air filter to the inlet pipe, and adjust until the K&N logo is straight before tightening in place. Tighten the clip until the filter just moves, then give one full turn (360 degrees). **No more.**
- 5 **Cold air intake system.**  
**Raise the front of the car taking the necessary safety precautions**
- 6 **Carefully** expand the flexi cold air hose to approximately 66cm / 26". Using a plastic tie attach the lower section of the hose to the small hole in the inner wing. **Drawing A.** Before tightening the plastic tie, attach the hose to the horizontal rib on the intake section. You will need to pierce a small hole in the hose. Continue the hose upwards and using a plastic tie, attach the hose to the cut out in the battery support bracket, **Drawing A.** Finish the hose approx 10cm/4" away from the filter.
- 7 **Tuning.**  
We suggest a simple **CO** test be carried out. As some cars may be set weaker than the standard **CO** setting, it should be no more than **0.5%** than the standard setting.
- 8 **Filter maintenance.**  
Under normal conditions clean and reoil the filter at approx 40,000 miles/65,000 km  
**Use only K&N cleaner and oil** and follow the instructions carefully.

**K&N Filters are pre-oiled ready to fit.**

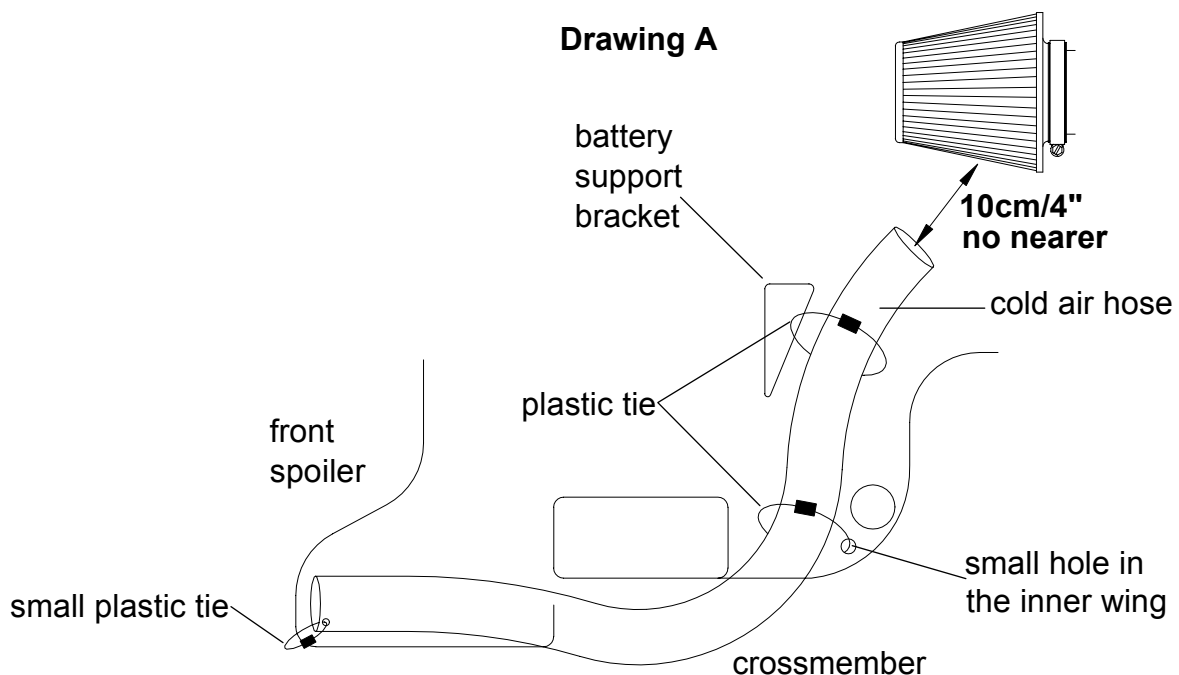

**The advantage's of K&N's cold air intake system**

Cooler air being denser will show positive improvements in power over filter systems that draw hot air from the engine bay.

**This Kit Should Contain :-**

- 1 x Clamp-on filter.
- 1 x Hose clip size 60.
- 1 x Small Clamp-on filter.
- 1 x Rubber adaptor.
- 1 x Cold air hose assembly.
- 1 x Plastic cable tie (8" long).
- 2 x Plastic cable ties (14" long).
- 1 x Instruction sheet.
- 1 x Instruction pack:-
  - 1 x K&N window sticker.
  - 1 x Filter maintenance sheet.
  - 1 x Million mile warranty card.
  - 1 x Leaflet.

**FITTING YOUR OWN 57i KIT**

If not, **it is essential** that the person fitting the kit (e.g. mechanic) **carefully follows these particular instructions** even if he has fitted K&N kits before. This will save you both time and money. Kits incorrectly fitted may show a loss in performance e.g. the positioning of the essential cold air hose, (flexi expandable and rubber hoses are used).

**A final check** under the bonnet, by yourself, with the instructions, would seem sensible.